



Product information

Article-Nr.: 2120003

IBS-Parts Cleaning Device Type M

Device in workbench height with a large work surface



Function:

By pressing the foot switch the self sucking IBS-special pump moves the cleaner from the barrel through the pipe to the brush.

During the manual cleaning process fresh liquid is flowing out and the soiled liquid flows back into the barrel.

The heavy dirt particles fall down to the bottom of the barrel. The pump sucks fresh cleaning agent from the middle of the barrel. An extended service life of the special cleaner is ensured.

To exchange the cleaner just change the barrel.

Optional Accessoires:



Collecting Tray	2120022
Exhaust System	2120013

Advantages:

- for cleaning of particularly large and heavy parts
- robust & solid construction
- 3 years service warranty for device and pump (if using the IBS special cleaner)
- MOT- type tested and certified

Type M | Technical data

Overall dimensions:	1145 x 670 x 1050 mm
Work surface (inside):	1135 x 660 mm
Work height:	870 mm
Load capacity:	250 kg
Tank capacity:	200 Liters Fass
Power connection:	230 V, 50 Hz

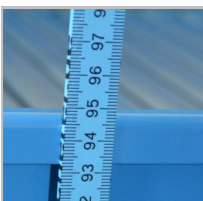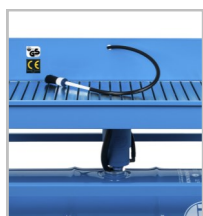









Accessories



Cleaner hydrocarbon based

fast evaporation
slow evaporation
residue-free
almost odourless
mild odour
very mild odour

Container size | Article numbers:

	fast evaporation	slow evaporation	residue-free	almost odourless	mild odour	very mild odour	Container size Article numbers:
 IBS-Special Cleaner EL/Extra	•		•	•			 2050061
 IBS-Special Cleaner RF		•			•		 2050059
 IBS-Special Cleaner Purgasol	•				•		 2050057
 IBS-Special Cleaner Securol		•				•	 2050067

Article-Nr.	Description	Device Type
		M
2222056	IBS-Special Pump with foot switch	•
2222040	IBS-Special Pump without foot switch	
2222057	IBS-Special Pump with foot switch	
2222080	IBS-Special Pump with foot switch	
2222066	Splash Guard	•
2222060	Support Grate lamella grate	•
2222061	Support Grate lamella grate	
2222016	Support Grate lamella grate	
2222062	Support Grate lamella grate	
2222008	Cleaning Brush bristles L/Ø: 55/35 mm fine	•
2222009	Cleaning Brush bristles L/Ø: 55/35 mm coarse	•
2222022	Footswitch with hood	•
2222024	Footswitch without hood	
2222026	wheel, 1 piece	
2221012	Return hose	•
2222033	Return Connection, ¾"	
2222035	Screw plug (Return Connection 2")	•
2222059	Brush tube	•

